



# **DS9900 Series Corded Hybrid Imager For Labs**



**Accessories Guide**

**DS9900 Series – Improve workflow efficiency and accuracy with the hybrid presentation imager built for the lab**



**DS9908**



**DS9908R**


# Cable options

## USB

Series A



Power Plus

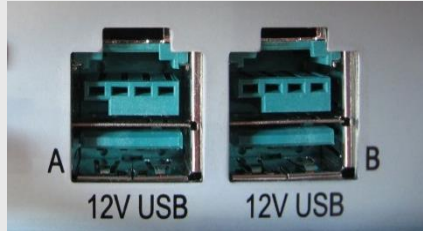

## USB Cables

### **CBA-U21-S07ZBR**

Shielded USB: Series A Connector, 7Ft. (2.1M), Straight, BC1.2



OR

### **CBA-U23-S07ZBR**

Shielded USB: Power Plus Connector, 7Ft. (2.1M), Straight, 12V



The full list of supported cables for both DS9908 and DS9908R can be found at:

[https://partnerportal.zebra.com/PartnerPortal/product\\_services/downloads/z/barcode\\_scanners/Universal-Cable-Guide-Bar-Code-Scanners.xlsx](https://partnerportal.zebra.com/PartnerPortal/product_services/downloads/z/barcode_scanners/Universal-Cable-Guide-Bar-Code-Scanners.xlsx)

## Main features

- USB communication
- Automatically detects the host
- Powered from the host, including DS9908R
- Straight or coiled cables available, as well as various cable lengths
- Range of different host types cables available
- Compatible with DS9808 USB cables (Shielded USB Cables are recommended for best ESD performance)

## Power Supplies

Not Applicable for USB Cables

# Cable options

## RS-232



### RS-232 Cables

#### CBA-R01-S07PBR

RS232: DB9F, 7Ft. (2M) ST, TXD-2, W/ TTL Current Limit Protection [Requires external 5V power supply]

OR

#### CBA-R37-C09ZBR

RS232: DB9F, 9Ft. (2.8M) CL, PWR Pin 9, W/ TTL Current Limit Protection

OR

#### CBA-R08-S07ZBR

RS232: 7FT (2M), NIXDORF BEETLE- 5V Direct Power, W/ TTL Current Limit Protection



The full list of supported cables for both DS9908 and DS9908R can be found at:

[https://partnerportal.zebra.com/PartnerPortal/product\\_services/downloads\\_z/barcode\\_scanners/Universal-Cable-Guide-Bar-Code-Scanners.xlsx](https://partnerportal.zebra.com/PartnerPortal/product_services/downloads_z/barcode_scanners/Universal-Cable-Guide-Bar-Code-Scanners.xlsx)

## Main features

- Serial communication
- Automatically detects the host
- External power supply not required, unless specified
- Straight or coiled cables available, as well as various cable lengths
- Range of different host types cables available
- Compatible with DS9808 & DS9808R RS-232 Cables

### Power Supplies for RS-232 cables

PWR-WUA5V4W0US	Power Supply, 5VDC, 100 - 240VAC, US/CA/MX/JP/TW
PWR-WUA5V4W0BR	Power Supply, 5VDC, 100 - 240VAC, Brazil
PWR-WUA5V4W0EU	Power Supply, 5VDC, 100 - 240VAC, EU/UK
PWR-WUA5V4W0CN	Power Supply, 5VDC, 100 - 240VAC, CN
PWR-WUA5V4W0AU	Power Supply, 5VDC, 100 - 240VAC, HK/AU



CBA-R01-S07PBR



+



PWR-WUA5V4W0US  
Power Supply  
5.2v, 1.1A

# Mounting Options

## Multi-mount Bracket

**BRKT-MM0099C-04**

Multi-Mount, DS9908 (Midnight Black)

[Compatible with DS9908 only, will not fit the DS9908R]

