



MP6000/MP7000 Technical Accessory Guide



NOTE: MP6000 discontinued 1/2018 - see PMB 3036

NOTE: This document is only for general reference. Solution Builder and related PMBs should be used for product availability, pricing, and final solution selection.


* Zebra does not endorse or specifically recommend any **third-party products, accessories, or hardware**. ZEBRA DISCLAIMS ANY AND ALL LIABILITY, INCLUDING ANY EXPRESS OR IMPLIED WARRANTIES, WHETHER ORAL OR WRITTEN, FOR SUCH THIRD PARTY PRODUCTS, ACCESSORIES, OR HARDWARE. THE CUSTOMER ACKNOWLEDGES THAT NO REPRESENTATION HAS BEEN MADE BY ZEBRA AS TO THE FITNESS OF THE THIRD-PARTY PRODUCTS, ACCESSORIES, OR HARDWARE FOR THE CUSTOMER'S INTENDED PURPOSE.

Communication Cables


Zebra associates and partners can also see Zebra's Universal Cable Guide at:

https://partnerportal.zebra.com/PartnerPortal/product_services/downloads_z/barcode_scanners/Universal-Cable-Guide-Bar-Code-Scanners.xlsx



Standard USB Cables

Part Number	Picture	Description	Notes	Required Items
CBA-U51-S16ZAR		USB Cable: Series A Connector, 5 meter Straight		<ul style="list-style-type: none"> Power Supply (PWR-BGA12V50W0WW and CBL-DC-375A1-01) AC Line Cord (23844-00-00R)


IBM POS USB Cables

Part Number	Picture	Description	Notes	Required Items
CBA-U52-S16PAR		USB Cable: Power Plus Connector, 5 meter Straight	Power is provided from POS	


RS232 Cables

Part Number	Picture	Description	Notes	Required Items
CBA-R51-S16ZAR		RS232 Cable:STD-DB9 Female, TxD on 2, 5 meter Straight	Also used to connect scale to POS (Dual Cable Scanner/Scale)	<ul style="list-style-type: none"> Power Supply (PWR-BGA12V50W0WW and CBL-DC-375A1-01) AC Line Cord (23844-00-00R) to power MP6000/MP7000
CBA-R52-S16ZAR		RS232 Cable:STD-DB9 Male, TxD on 2, 5 meter Straight	Also used to connect scale to POS (Dual Cable Scanner/Scale)	<ul style="list-style-type: none"> Power Supply (PWR-BGA12V50W0WW and CBL-DC-375A1-01) AC Line Cord (23844-00-00R) to power MP6000/MP7000


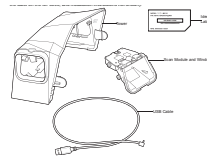

Other POS Terminal RS232 Cables





Part Number	Picture	Description	Notes	Required Items
CBA-R53-S16PAR		RS232 Cable: DB15 TxD on 4, Power on 1, 5 meter Straight	Provides power to MP6000/MP7000	




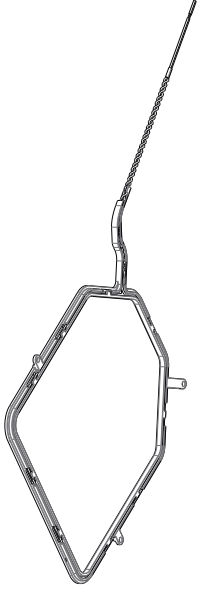
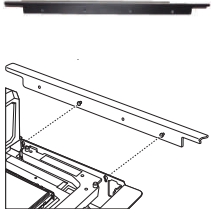
IBM 468x/469x POS Cables




Part Number	Picture	Description	Notes	Required Items
CBA-M51-S16PAR		IBM 468x/9x, Port 9B Cable, 5 meter Straight	<ul style="list-style-type: none"> RS485 interface cable Provides power to MP6000/MP7000 	

Auxiliary Cables




CBA-A51-S16ZAR		Auxillary Scanner Cable, RS232 Serial	<ul style="list-style-type: none"> Allows handheld scanners (i.e. LI4278, LS4278, or DS6878) to be used with MP6000/MP7000 for scanning heavy/awkward items. 5 meter length RS232 serial connection to scanner Connects to AUX2 port on MP6000/MP7000 Provides power to corded scanners NOTE: MP6000/MP7000 supports maximum of 2 auxillary scanners. 	NOTE: If cradle is used with a cordless scanner, it must be powered using an external power supply.
Various		Auxillary Scanner Cable, USB	<ul style="list-style-type: none"> Refer to accessory document for handheld scanner for USB cable choice. Allows handheld scanners (i.e. LI4278, LS4278, or DS6878) to be used with MP6000/MP7000 for scanning heavy/awkward items. USB connection to scanner Connects to AUX A-B port on MP6000 Provides 5V power to scanners NOTE: MP6000/MP7000 supports maximum of 2 auxillary scanners. 	
Keyboard Wedge Cables (Not supported by MP6000/MP7000)				
Wand Cables (Not supported by MP6000/MP7000)				
Synapse Adapter Cables (Not supported by MP6000/MP7000)				
Misc				
Part Number	Picture	Description	Notes	Required Items
MX101-SR7000WW		Customer Side Scanner (CSS) for MP7000	<ul style="list-style-type: none"> Allows customers to simultaneously scan their own loyalty cards, coupons, impulse buy items and bar codes displayed on their mobile phones Uses SE3317 scan engine Includes Top Cover, scan engine, and USB cable. Connect USB cable to top port on MP7000 AUX A-B USB ports. Only compatible with MP7000. 	
MX201-SI00WW		Scale Display with Pole (Single display) - Pounds or KG - <u>Single</u> Interval	<ul style="list-style-type: none"> Single Display Head: Clear, easy to adjust weight display. Includes scale display templates/overlays for single interval LB, and single interval KG. Single Interval is the most common scale display requirement (used in US) and is used with Single Interval scale configurations of the MP series. Dual Interval (MX201-DI00WW) may be required in other countries (i.e. Russia). Display connects to 0.0 port on MP6000/MP7000. Has a slightly smaller footprint than MX201-SR0004ZZWR/MX201-SR0004ZZRR which allows for easier installation. 	

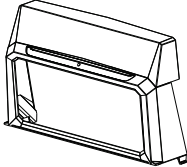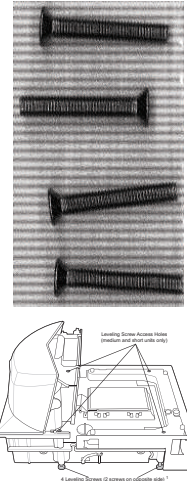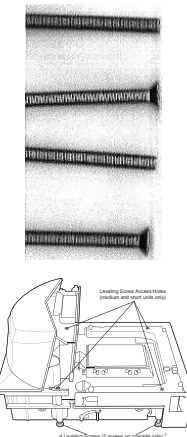

MX201-DI00WW		Scale Display with Pole (Single display) - Pounds or KG - Dual Interval	<ul style="list-style-type: none"> •Single Display Head: Clear, easy to adjust weight display. •Includes scale display templates/overlays for dual interval LB and dual interval KG. •Dual Interval is not a common display configuration. It may only be required in certain countries (i.e. Russia) and is used with Dual Interval scale configurations of the MP series.. Use Single Interval configuration (MX201-SI00WW) in most countries (including US). •Display connects to 0.0 port on MP6000/MP7000. •Has a slightly smaller footprint than MX201-SR00004ZZWR/MX201-SR00004ZZRR which allows for easier installation. 	
MX201-MOD		Scale Display with Pole (Single display) - Pounds only - Modified Hole Pattern	<ul style="list-style-type: none"> •To be discontinued 2/2019 - see PMB 10043 •Uses different hole pattern than MX201-SR00004ZZWR •Single Display Head: Clear, easy to adjust weight display for pounds only scale models. •Includes scale display template/overlay for single interval LB •Display connects to 0.0 port on MP6000/MP7000. 	
MX202-SI00WW		Scale Display with Pole (Dual display) - Pounds or KG - Single Interval	<ul style="list-style-type: none"> •Dual Display Heads: Clear, easy to adjust weight display. •Dual-heads are used where the law is strictest on visibility of the weight value for cashier and customer. Design fully rotates both heads independently, offering maximum flexibility and visibility. Competing designs have heads whose rotation interferes with each other, limiting the choice for direction of display. •Includes scale display templates/overlays for single interval LB, and single interval KG. •Single Interval is the most common scale display requirement (used in US) and is used with Single Interval scale configurations of the MP series. Dual Interval (MX202-DI00WW) may be required in other countries (i.e. Russia). •Display connects to 0.0 port on MP6000/MP7000. 	
MX202-DI00WW		Scale Display with Pole (Dual display) - Pounds or KG - Dual Interval	<ul style="list-style-type: none"> •Dual Display Heads: Clear, easy to adjust weight display. •Dual-heads are used where the law is strictest on visibility of the weight value for cashier and customer. Design fully rotates both heads independently, offering maximum flexibility and visibility. Competing designs have heads whose rotation interferes with each other, limiting the choice for direction of display. •Includes scale display templates/overlays for dual interval LB, and dual interval KG. •Dual Interval is not a common display configuration. It may only be required in certain countries (i.e. Russia) and is used with Dual Interval scale configurations of the MP series. Use Single Interval configuration (MX202-SI00WW) in most countries (including US). •Display connects to 0.0 port on MP6000/MP7000. 	

MX201-POLE-EXT		Scale Display Extension Pole	<ul style="list-style-type: none"> Compatible with Scale Display with Pole (Single display) - (MX201-S100WW) Extends length of scale display pole by 24 inches. Includes pipe flange for mounting pole on countertop and 4 screws 	
MX201-EXT		Scale Display Extension Pole	<ul style="list-style-type: none"> Extends length of scale display pole by 24 inches. Includes pipe flange for mounting pole on countertop and 4 screws 	
CBA-A54-S01EAR		Checkpoint Interlock Cable	<ul style="list-style-type: none"> Allows MP6000/MP7000 to send good barcode scan message to Checkpoint system for EAS tag deactivation in parallel to scanning the barcode on the product Cable connects to Checkpoint Interlock Port on MP6000/MP7000. Requires proper integration with Checkpoint EAS system by Checkpoint personnel. 	
MX306-SA00WW		Checkpoint Antenna - Horizontal	<ul style="list-style-type: none"> Antenna used to de-activate Checkpoint Electronic Article Surveillance (EAS) Systems. Only compatible with MP7000. 	
MX307-SA00WW		Checkpoint Antenna - Vertical	<ul style="list-style-type: none"> Antenna used to de-activate Checkpoint Electronic Article Surveillance (EAS) Systems. Only compatible with MP7000. 	
MX303-SB-05		Width Extender (trim piece) for MP7000	<ul style="list-style-type: none"> Used with M7000 Long models to fit into a counter cut-out previously occupied by a 12 in. wide NCR scanner/scale. The trim can be mounted on either side of the MP7000. It should be installed in the downstream side of the conveying goods. Adds 0.5 in. (1.2 cm) to the width of the MP7000. Includes 4 screws for attaching Extender 	

MX305-SR00004ZZWR		Tower Extender	<ul style="list-style-type: none"> •To be discontinued 2/2019 - see PMB 10043 •Extends height of MP6000/MP7000 from 5.1 inches to 7 inches •Attaches to Top Cover 	
MX301-SR00004ZZWR		Leveling Screws - Standard length, pack of 4	<ul style="list-style-type: none"> •NOTE: These screws are already included with each Short or Medium size MP7000 unit. •Used with Short and Medium size MP6000/MP7000 units. •Long versions do not support leveling screws. The checkstand should provide for two leveling screws under the front and rear of the MP6000/MP7000. •M8 x 50 mm size •Allows fine adjustment of short and medium model MP6000/MP7000 scanners so they are perfectly flush in the checkstand 	
MX302-SR00004ZZWR		Leveling Screws - Extended length, pack of 4	<ul style="list-style-type: none"> •M8 x 70 mm size •Used with Short and Medium size MP6000/MP7000 units. •Long versions do not support leveling screws. The checkstand should provide for two leveling screws under the front and rear of the MP6000/MP7000. •The MP6000/MP7000 is 4 in. deep. If replacing a pre-existing 5 in. deep short or medium scanner, these screws will bring the platter up to the countertop level. •Allows fine adjustment of short and medium model MP6000/MP7000 scanners so they are perfectly flush in the checkstand, while matching the 12.5cm / 5" depth of some older laser bioptic scanners •Extended length screws which will protrude 1"-inch (25 mm) below the bottom of the unit. 	

Power Supplies/Power Cords

Part Number	Picture	Description	Notes	Required Items
CBL-DC-388A1-01		DC Power Cord for MP7000	<ul style="list-style-type: none"> •Used along with Power Supply PWR-BGA12V50W0WW to power MP7000. Can also be used with MP6000, but CBL-DC-375A1-01 is the preferred cable for MP6000. •Cable length is 1.8 meters 	
CBL-DC-375A1-01		DC Power Cord for MP6000	<ul style="list-style-type: none"> •Used along with Power Supply PWR-BGA12V50W0WW to power MP6000. •Cable length is 1.5 meters 	
PWR-BGA12V50W0WW		Power Supply	<ul style="list-style-type: none"> •100-240 VAC, 12V, 4.16A, 50W •Provides US DOE Level VI compliance for power efficiency. •Replaces PWRS-14000-148R 	<ul style="list-style-type: none"> •DC Line Cord (CBL-DC-375A1-01) for MP6000 OR DC Line Cord (CBL-DC-388A1-01) for MP7000 •AC Line Cord (23844-00-00R)

KIT-PWR-12V50W		Power Supply Kit for MP7000	<ul style="list-style-type: none"> ▪Includes Power Supply (PWR-BGA12V50W0WW) and DC Line Cord (CBL-DC-388A1-01) ▪Used to power MP7000. Can also be used with MP6000, but CBL-DC-375A1-01 and BGA12V50W0WW is the preferred cable and power supply for MP6000. 	AC Line Cord (23844-00-00R)
23844-00-00R		AC Line Cord		